


RYB050I/HC-05 2.4GHz Bluetooth Module

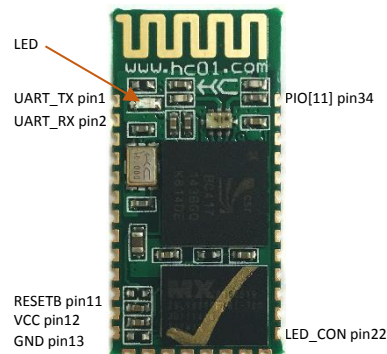

Function description

- * Has a build-in 2.4GHz PCB antenna
- * PIO control can be switched
- * Has the standard HCI Port (UART or USB)
- * The USB protocol is Full Speed USB1.1, and compliant with 2.0.
- * This module can be used in the SMD.
- * Bases at CSR BC417, Fully Qualified Bluetooth v2.0
- * It is at the Bluetooth class 2 power level
- * Has the function of adaptive frequency hopping.
- * Low Cost

Application fields

- * Bluetooth Car Handsfree Device
- * Bluetooth GPS
- * Bluetooth PCMCIA , USB Dongle
- * Bluetooth Data Transfer

Software

- * CSR Standard

Ordering Information

- * 50 pieces chips in an anti-static blister package



Technical Specifications

	Min.	Typ.	Max.	Unit	Note
Operating Voltage	3.1	3.3	4.2	V	VCC
Current (in pairing)	30		40	mA	
Current (communication)		8		mA	
Operating Frequency	2.4		2.4835	GHz	
RF output power	-6	2	4	dBm	
Step size of Power control	2		8	dB	
Baud rate	4800	38400	1382400	Hz	
Freq. Offset	-75		75	KHz	
Carrier Freq. drift (Hopping on, drift rate/50uS)	-20		20	KHz	
1 slot packet	-25		25	KHz	
3 slot packet	-40		40	KHz	
Average Freq. Deviations (Hopping off, modulation)	140		175	KHz	
Freq. Deviation	115			KHz	
Ratio of Freq. Deviation	0.8				
Communication Distance			10	M	
Receive Sensitivity @< 0.1% BER		-83		dBm	$\pi/4$ DQPSK
Flash memory		8		Mbit	
Dimensions					27mm×13mm 2mm
Weight				g	
Operating Temperature	-40		+85	°C	


PINs description

Pin	Name	Input/Output	Description
1	UART_TX	CMOS output, Tri-stable with weak internal pull-up	UART Data output
2	UART_RX	CMOS input with weak internal pull-down	UART Data input
3	UART_CTS	CMOS input with weak internal pull-down	UART clear to send, active low
4	UART_RTS	CMOS output, tri-stable with weak internal pull-up	UART request to send, active low
5	PCM_CLK	Bi-directional with weak internal pull-down	Synchronous data clock
6	PCM_OUT	CMOS output, tri-state, with weak internal pull-down	Synchronous data output
7	PCM_IN	CMOS input, with weak internal pull-down	Synchronous data input
8	PCM_SYNC	Bi-directional with weak internal pull-down	Synchronous data sync
9	AIO[0]	Bi-Directional	Programmable input/output line
10	AIO[1]	Bi-Directional	Programmable input/output line
11	RESETB	CMOS Input with weak internal pull-down	Reset if low. Input debounced so must be low for >5ms to cause a reset
12	VCC	Power supply	
13	GND	GROUND	
14	1V8	VDD	Integrated 1.8V (+) supply with On-chip linear regulator output within 1.7-1.9V
15	USB_-	Bi-Directional	USB data minus
16	SPI_CSB	CMOS input with weak internal pull-up	Chip select for serial peripheral interface, active low
17	SPI_MOSI	CMOS input with weak internal pull-down	Serial peripheral interface data input
18	SPI_MISO	CMOS input with weak internal pull-down	Serial peripheral interface data Output
19	SPI_CLK	CMOS input with weak internal pull-down	Serial peripheral interface clock


20	USB_+	Bi-Directional	USB data plus
21	GND	GROUND	
22	LED_CON	L :LED OFF OPEN: LED ON	LED ON/OFF
23	PIO[0]/RXEN	Bi-directional with programmable strength internal pull-up/down	Programmable input/output line, control output for LNA(if fitted)
24	PIO[1]/TXEN	Bi-directional with programmable strength internal pull-up/down	Programmable input/output line, control output for PA(if fitted)
25	PIO[2]	Bi-directional with programmable strength internal pull-up/down	Programmable input/output line
26	PIO[3]	Bi-directional with programmable strength internal pull-up/down	Programmable input/output line
27	PIO[4]/BT_Priority/Ch_Clk	Bi-directional with programmable strength internal pull-up/down	Programmable input/output line or optional BT_Priority/Ch_Clk output for co-existence signalling
28	PIO[5]/BT_Active	Bi-directional with programmable strength internal pull-up/down	Programmable input/output line or optional BT_Active output for co-existence signalling
29	PIO[6]/WLAN_Active/Ch_Data	Bi-directional with programmable strength internal pull-up/down	Programmable input/output line or optional WLAN_Active/Ch_Data input for co-existence signalling
30	PIO[7]	Bi-Directional	Programmable input/output line
31	PIO[8]	LED Output	<p>LED, indicator of work mode. Has 3 modes:When the module is supplied power and PIN34 is input high level, PIN31 output 1Hz square wave to make the LED flicker slowly. It indicates that the module is at the AT mode, and the baud rate is 38400.</p> <p>When the module is supplied power and PIN34 is input low level, PIN31 output 2Hz square wave to make the LED flicker quickly. It indicates the module is at the pairable mode. If PIN34 is input high level, then the module will enter to AT mode, but the output of PIN31 is still 2Hz square wave. After the pairing, PIN31 output 2Hz square wave.</p>

			Note: if PIN34 keep high level, all the commands in the AT command set can be in application. Otherwise, if just excite PIN34 with high level but not keep, only some command can be used.
32	PIO[9]	Output	Before paired, it output low level. Once the pair is finished, it output high level.
33	PIO[10]	Bi-Directional	Programmable input/output line
34	PIO[11]	INPUT	Mode switch input. If it is input low level, the module is at paired or communication mode. If it's input high level, the module will enter to AT mode. Even though the module is at communication, the module can enter to the AT mode if PIN34 is input high level. Then it will go back to the communication mode if PIN34 is input low level again.


Application Circuit

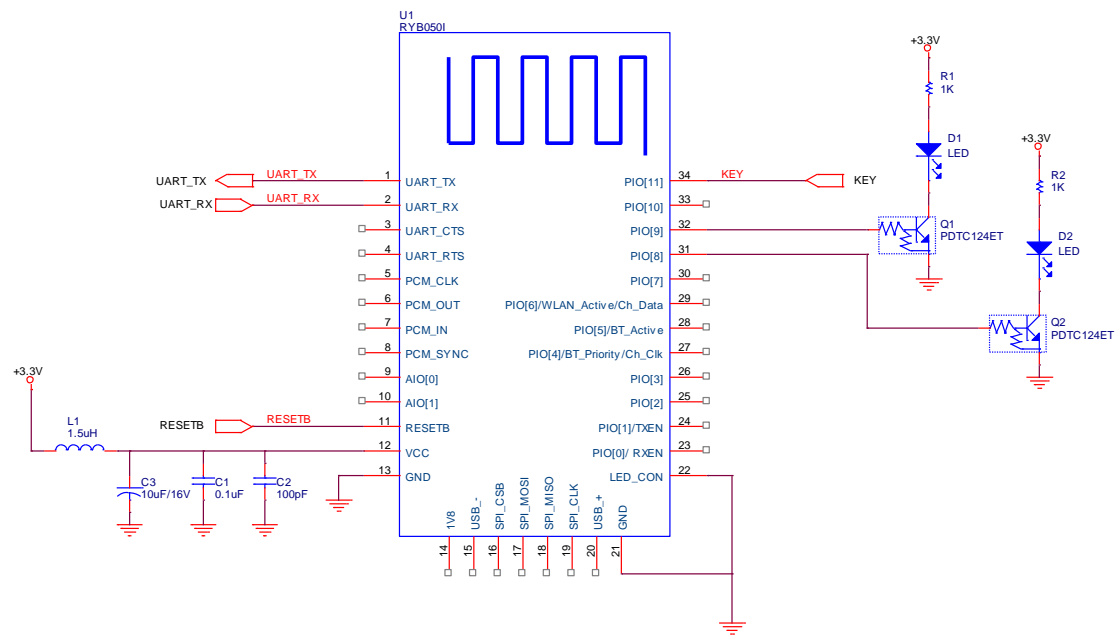

Dimensions

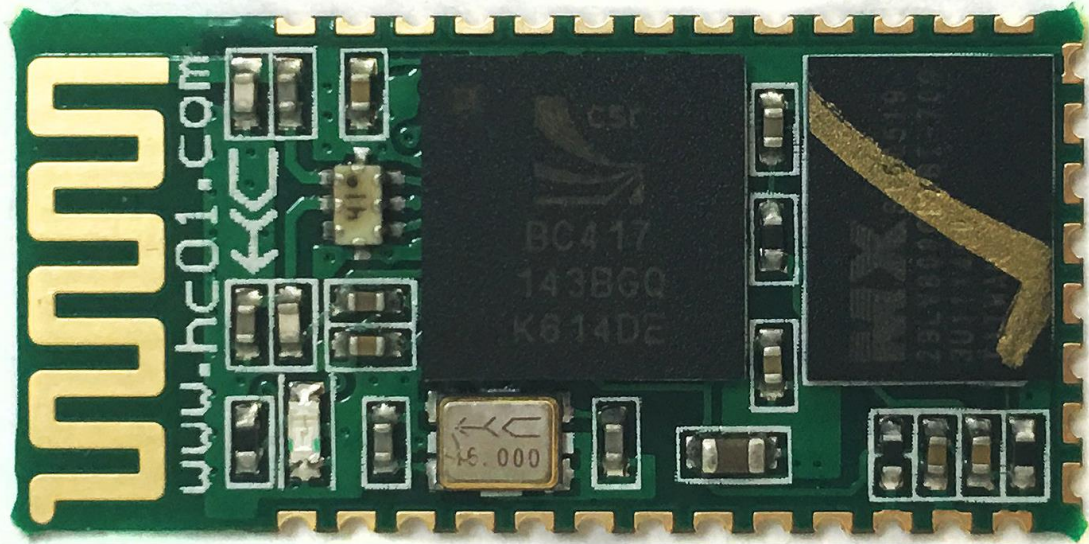

27mm(L)*13mm(W)*2mm(H)

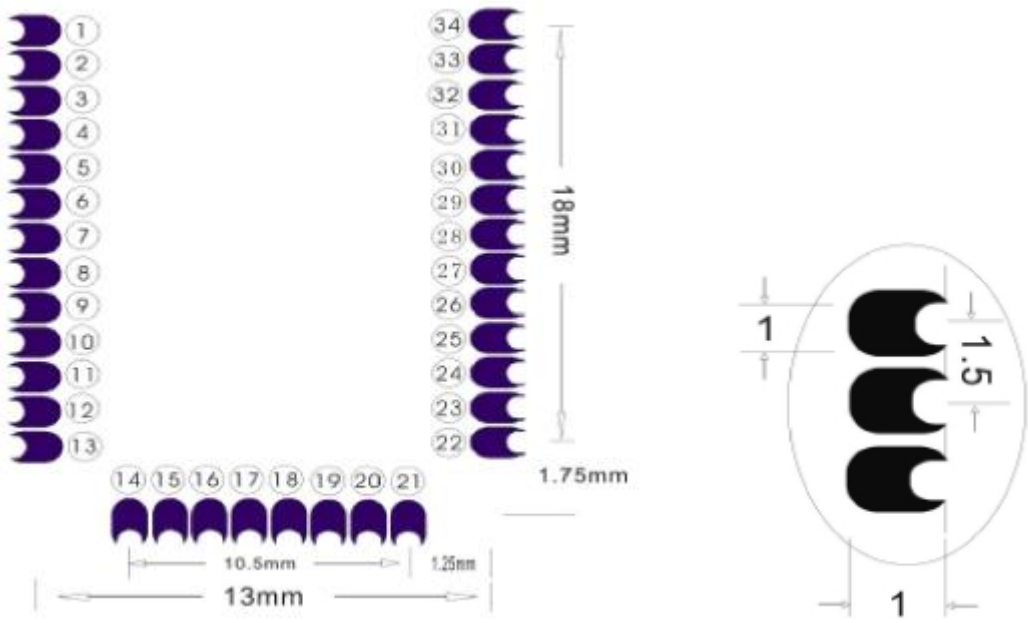

RYB050I embedded Bluetooth serial communication module has two work modes: **order-response work mode** and **automatic connection work mode**. And there are three work roles (**Master, Slave and Loopback**) at the automatic connection work mode.

When the module is at the **automatic connection work mode**, it will follow the default way set lastly to transmit the data automatically.

When the module is at the **order-response work mode**, user can send the AT command to the module to set the control parameters and sent control order. The work mode of module can be switched by controlling the module PIN (PIO[11]) input level.

Serial module PINs:

1. PIO[8] connects with LED. When the module is power on, LED will flicker. And the flicker style will indicate which work mode is in using since different mode has different flicker time interval.
2. PIO[9] connects with LED. It indicates whether the connection is built or not. When the Bluetooth serial is paired, the LED will be turned on. It means the connection is built successfully.
3. PIO[11] is the work mode switch. When this PIN port is input high level, the work mode will become order-response work mode. While this PIN port is input low level or suspended in air, the work mode will become automatic connection work mode.
4. The module can be reset if it is re-powered since there is a reset circuit at the module.

====Notification=====

1. How to get to the AT mode.

Way 1:

Step 1: Input low level to PIN34. Step 2: Supply power to the module. Step 3: Input high level to the PIN34. Then the module will enter to AT mode. The baud rate is as same as the communication time, such as 9600 etc.

Way 2: Step 1: Connect PIN34 to the power supply PIN. Step 2: Supply power to module (the PIN34 is also supplied with high level since the PIN34 is connected with power supply PIN). Then the module will enter to AT module. But at this time, the baud rate is 38400. In this way, user should change the baud rate at the AT mode, if they forget the communication baud rate.

How to get to the communication mode: Step 1: Input low level to PIN34. Step 2: Supply power to the module. Then the module will enter to communication mode. It can be used for pairing.

2. How to set this module be the master role.

Step 1: Input high level to PIO[11].

Step 2: Supply power to the module. And the module will enter to the order-response work mode.

Step 3: Set the parameters of the super terminal or the other serial tools

(baud rate:38400, data bit:8, stop bit:1, no parity bit, no Flow Control)

Step 4: Sent the characters "AT+ROLE=1\r\n" through serial, then receive the characters "OK\r\n".

Here, "\r\n" is the CRLF.

Step 5: Input low level to PIO, and supply power to the module again. Then this module will become master role and search the other module (slave role) automatically to build the connection.

3. Notes.

(1) The command should end up with "\r\n". It means when you finish programming, you should add terminator ("ENTER" or "0x0D 0x0A") to the program.

(2) The most common commands for the module are: AT+ROLE (set master – slave), AT+CMODE(set address pairing) , AT+PSWD (set password). If you want the master module has the function of remembering slave module, the most simply way is: First, set AT+CMODE=1. Make the master module pair with the slave module. Second, set AT+CMODE=0. Then the master module just can make pair with that specified slave module.

(3) When PIN34 keeps high level, all commands can be used. Otherwise, only some of them can be used.

Detailed description of Command

(AT command is case- sensitive, should end up with terminator (“enter” or “\r\n”).)

1. Test

Command	Response	Parameter
AT	OK	None

2. Reset

Command	Response	Parameter
AT+RESET	OK	None

3. Get the soft version

Command	Response	Parameter
AT+VERSION?	+VERSION: <Param> OK	Param: Version number

Example :

```
at+version?\r\n
```

```
+VERSION:2.0-20100601
```

```
OK
```

4. Restore default status

Command	Response	Parameter
AT+ORGL	OK	None

The parameter of default status:

- ① · Device type: 0
- ② · Inquire code: 0x009e8b33
- ③ · Module work mode: Slave Mode
- ④ · Connection mode: Connect to the Bluetooth device specified
- ⑤ · Serial parameter: Baud rate: 38400 bits/s; Stop bit: 1 bit; Parity bit: None.
- ⑥ · Passkey: “1234”
- ⑦ · Device name: “H-C-2010-06-01”

5. Get module Bluetooth address

Command	Response	Parameter
AT+ADDR?	+ADDR: <Param> OK	Param: Bluetooth address

Bluetooth address will show as this way: NAP: UAP: LAP(Hexadecimal)

Example:

Module Bluetooth address: 12: 34: 56: ab: cd: ef

at+addr?\r\n

+ADDR:1234:56:abcdef

OK

6. Set/ inquire device's name

Command	Response	Parameter
AT+NAME=<Param>	OK	Param: Bluetooth device name
AT+NAME?	1. +NAME:<Param> OK----success 2. FAIL----failure	

Example:

AT+NAME=REYAX\r\n ---set the module device name: "REYAX"

OK

AT+NAME="REYAX"\r\n ---set the module device name: "REYAX"

OK

at+name=TEST1\r\n ---set the module device name: "TEST1"

OK

at+name="TEST1"\r\n ---set module device name : "TEST1"

OK

at+name?\r\n

+NAME: TEST1

OK

7. Get the remote Bluetooth device's name

Command	Response	Parameter
AT+RNAME?<Param1>	1. +NAME:<Param2> OK----success 2. FAIL----failure	Param1: Remote Bluetooth device address Param2: Remote Bluetooth device address

Bluetooth address will show as this way: NAP:UAP:LAP (Hexadecimal)

Example:

Bluetooth device address: 00:02:72: od: 22 : 24; device name: Bluetooth

```
at+rname? 0002,72,od2224\r\n
```

```
+RNAME:Bluetooth
```

```
OK
```

8. Set/ inquire module role

Command	Response	Parameter
AT+ROLE=<Param>	OK	Param:
AT+ROLE?	+ROLE:<Param> OK	0---- Slave role 1---- Master role 2---- Slave-Loop role Default: 0

Role introduction:

Slave (slave role)----Passive connection;

Slave-Loop----Passive connection, receive the remote Bluetooth master device data and send it back to the master device;

Master (master role)----Inquire the near SPP Bluetooth slave device, build Connection with it positively, and build up the transparent data transmission between master and slave device.

9. Set/inquire device type

Command	Response	Parameter
AT+CLASS=<Param>	OK	Param: device type

AT+ CLASS?	1. + CLASS:<Param> OK----success 2. FAIL----failure	Bluetooth device type is a 32-bit parameter indicates the device type and what type can be supported. Default: 0 More information is provided at the appendix 1(device type introduction).
------------	---	--

For inquiring the custom Bluetooth device from around Bluetooth devices quickly and effectively, user can set the module to be non-standard Bluetooth device type, such as 0x1f1f (Hexadecimal).

10. Set/ inquire-Inquire access code

Command	Response	Parameter
AT+IAC=<Param>	1. OK----success 2. FAIL----failure	Param: Inquire access code Default: 9e8b33
AT+ IAC?	+IAC: <Param> OK	The more information is provided at the appendix 2(Inquire access code introduction).

Access code is set to be GIAC type (General Inquire Access Code:0x9e8b33), and used for seeking (or being sought by) all the Bluetooth devices around.

For inquiring (or being inquiring by) the custom Bluetooth device from around Bluetooth devices quickly and effectively, user can set the inquire access code to be the other type number (not GIAC nor LIAC), such as 9e8b3f.

Example:

```
AT+IAC=9e8b3f\r\n
```

```
OK
```

```
AT+IAC?\r\n
```

```
+IAC: 9e8b3f
```

```
OK
```

11. Set/ inquire - Inquire access mode

Command	Response	Parameter
AT+INQM=<Param>, <Param2>,<Param3>	1. OK----success 2. FAIL----failure	Param: Inquire access mode 0----inquiry_mode_standard

AT+ INQM?	+INQM:<Param>,<Param2>,<Param3> OK	1----inquiry_mode_rssi Param2: the maximum of Bluetooth devices response Param3:The maximum of limited inquiring time The range of limited time: 1~48(Corresponding time:1.28s~61.44s) Default: 1, 1, 48
-----------	---	--

Example:

AT+INQM=1,9,48\r\n ----Set Inquire access mode: 1) has RSSI signal intensity indicator, 2) stop inquiring once more than 9 devices response, 3) limited time is 48*I. 28=61.44s

OK

AT+INQM\r\n

+INQM:1, 9, 48

OK

12. Set/Inquire- passkey

Command	Response	Parameter
AT+PSWD=<Param>	OK	Param: passkey Default: "1234"
AT+ PSWD?	+ PSWD : <Param> OK	

13. Set/ Inquire- serial parameter

Command	Response	Parameter
AT+UART=<Param>,<Param2>,<Param3>	OK	Param1: baud rate(bits/s) The value (Decimal) should

<p>AT+ UART?</p>	<p>+</p> <p>UART=<Param>,<Param2>,<Param3></p> <p>OK</p>	<p>Param1: baud rate(bits/s)</p> <p>The value (Decimal) should be one of the following:</p> <p>4800</p> <p>9600</p> <p>19200</p> <p>38400</p> <p>57600</p> <p>115200</p> <p>23400</p> <p>460800</p> <p>921600</p> <p>1382400</p> <p>Param2:stop bit:</p> <p>0----1 bit</p> <p>1----2 bits</p> <p>Param3: parity bit</p> <p>0----None</p> <p>1----Odd parity</p> <p>2----Even parity</p> <p>Default: 9600, 0, 0</p>
------------------	--	---

Example:

Set baud rate to be 115200, stop bit to be 2 bits, parity bit to be even parity.

AT+UART=115200,1,2,\r\n

OK

AT+UART?

+UART:115200,1,2

OK

14. Set/ Inquire - connection mode

Command	Response	Parameter
AT+CMODE=<Param>	OK	Param:
AT+ CMODE?	+ CMODE:<Param> OK	0----connect the module to the specified Bluetooth address.(Bluetooth address can be specified by the binding command) 1----connect the module to any address (The specifying address has no effect for this mode.) 2----Slave-Loop Default connection mode: 0

15. Set/Inquire - bind Bluetooth address

Bluetooth address will show as this way: NAP: UAP:LAP(Hexadecimal)

Command	Response	Parameter
AT+BIND=<Param>	OK	Param----Bluetooth address
AT+ BIND?	+ BIND:<Param> OK	needed to be bind Default address: 00:00:00:00:00:00

Bluetooth address will show as this way: NAP:UAP:LAP(Hexadecimal)

This command is effective only when the module wants to connect to the specified Bluetooth address.

Example:

The module is at connection mode which connects to specified Bluetooth address, and the specified address is 12:34:56:ab:cd:ef.

Command and the response show as follow:

AT+BIND=1234, 56, abcdef\r\n

OK

AT+BIND?\r\n

+BIND:1234:56:abcdef

OK

16. Set/Inquire - drive indication of LED and connection status

Command	Response	Parameter
AT+POLAR=<Param1>, <Param1>	OK	Param1:The value is 0----PI08 outputs low level and turn on LED 1----PI08 outputs high level and turn on LED
AT+ BIND?	+ POLAR=<Param1>, <Param1> OK	Param2:The value is 0----PI09 output low level, indicate successful connection 1----PI09 output high level, and indicate successful connection Default: 1, 1

Bluetooth module definition: The output of PI0[8] drives indication of LED work mode; the output of PI0[9] indicates the connection status.

Example:

PI0[8] outputs low level and turn on LED, PI09 outputs high level and indicates successful connection.

Command and response show as follow:

AT+POLAR=0, 1\r\n

OK

AT+POLAR?\r\n

+POLAR=0, 1

OK

17. Set PIO single port output

Command	Response	Parameter
AT+PIO=<Param1>,<Param2>	OK	Param1: PIO port number(Decimal) Param2: PIO port status 0----low level 1----high level

Bluetooth module provides the user with the ports (PI0[0]~PI0[7] and PI0[10])which can extern another input and output ports.

Example:

1. PI0[10] port outputs high level

AT+PIO=10, 1\r\n

OK

2. PIO[10] port output low level

AT+PIO=10, 0\r\n

OK

18. Set PIO multiple port output

Command	Response	Parameter
AT+MPIO=<Param>	OK	Param: Mask combination of PIO ports number (Decimal)

Bluetooth module provides the ports (PIO0~PIO7 and PIO10) which can extern another input and output ports to the user.

(1) Mask of PIO port number = $(1 \ll \text{port number})$

(2) Mask combination of PIO ports number= (PIO port number mask 1 | PIO port number mask 2 |.....)

Example :

PIO[2] port number mask= $(1 \ll 2) = 0x004$

PIO[10] port number mask = $(1 \ll 10) = 0x400$

Mask combination of PIO2 and PIO10 port number= $(0x004 | 0x400) = 0x404$

Example:

1. PIO10 and PIO2 ports output high level

AT+MPIO=404\r\n

OK

2. PIO4 port output high level

AT+PIO=004\r\n

OK

3. PIO[10] port output high level

AT+PIO=400\r\n

OK

4. All ports output low level

AT+MPIO=0\r\n

OK

19. Inquire PIO port input

Command	Response	Parameter
AT+MPIO?	+MPIO: <Param> OK	Param----PIO port value (16bits) Param[0]=PI00 Param[1]=PI01 Param[2]=PI02 Param[10]=PI010 Param[11]=PI011

Bluetooth module provides the user with the ports (PI0[0]~PI0[7] and PI0[10])which can extern another input and output ports.

20. Set/ Inquire page scan and inquire scan parameter

Command	Response	Parameter
AT+IPSCAN=<Param1>,<Param2>,<Param3>,<Param4>AT+IPSCAN?	OK +IPSCAN: <Param1>,<Param2>,<Param3>,<Param4> OK	Param1:time interval of inquiring Param2: duration in inquiring Param3: time interval of paging Param4: duration in paging The above parameters are decimal. Default:1024,512,1024,512

Example:

at+ipscan=1234,500,1200,250\r\n

OK

at+ipscan?

+IPSCAN:1234,500,1200,250

21. Set/ Inquire—SHIFF energy parameter

Command	Response	Parameter
AT+SNIFF=<Param1> ,<Param2>, <Param3>,<Param4>	OK	Param1: maximum time Param2: minimum time Param3: test time Param4: limited time
AT+IPSCAN?	+SNIFF: <Param1>,<Param2>,<Param3>,<Param4>	The above parameters are decimal. Default : 0,0,0,0

22. Set/ Inquire safe and encryption mode

Command	Response	Parameter
AT+SENM=<Param>,<Param2>	1. OK----success 2. FAIL----failure	Param: the value of safe mode: 0----sec_mode0+off 1----sec_mode1+non_secure 2----sec_mode2_service 3----sec_mode3_link 4----sec_mode_unknown
AT+ SENM?	+SENM:<Param>,<Param2>, OK	Param2: the value of encryption mode: 0----hci_enc_mode_off 1----hci_enc_mode_pt_to_pt 2----hci_enc_mode_pt_to_pt_and_bcast Default: 0,0

23. Delete authenticated device in the Bluetooth pair list

Command	Response	Parameter
AT+PMSAD=<Param>	OK	Param: Bluetooth device address

Example:

Delete the device (address: 12:34:56:ab:cd:ef) in the blue pair list

```
at+rmsad=1234,56,abcdef\r\n
```

OK ---- successful deletion

Or

```
at+rmsad=1234,56,abcdef\r\n
```

FAIL ----There is no the Bluetooth device whose address is 12:34:56:ab:cd:ef in the pair list.

24. Delete all authenticated devices in the pair list

Command	Response	Parameter
AT+RMAAD	OK	None

Example:

Move all devices away from the pair list.

at+rmaad\r\n

OK

25. Seek the authenticated device in the Bluetooth pair list

Command	Response	Parameter
AT+FSAD=<Param>	1. OK----success 2. FAIL----failure	Param: Bluetooth device address

Example:

Seek the authenticated device (address: 12:34:56:ab:cd:ef) in the pair list

at+fsad=1234,56,abcdef\r\n

OK ----the Bluetooth device whose address is 12:34:56:ab:cd:ef is found.

at+fsad=1234,56,abcde0\r\n

FAIL ----There is no the Bluetooth device whose address is 12:34:56:ab:cd:e0 in the pair list.

26. Get the authenticated device count from the pair list

Command	Response	Parameter
AT+ADCN?	+ADCN:<Param> OK	Param: Authenticated Device Count

Example:

at+adcn?

+ADCN:0 ----There is no authenticated device in the pair list.

OK

27. Get the Bluetooth address of Most Recently Used Authenticated Device

Command	Response	Parameter
AT+MRAD?	+ MRAD : <Param> OK	Param: the Bluetooth address of Most Recently Used Authenticated Device

Example:

at+mrad?

+MRAD:0:0:0 ----There is no device that has been used recently.

OK

28. Get the work status of Bluetooth module

Command	Response	Parameter
AT+STATE?	+ STATE: <Param> OK	Param: work status of module Return value : "INITIALIZED" ----initialized status "READY" ---- ready status "PAIRABLE" ----pairable status "PAIRED" ----paired status "INQUIRING" ----inquiring status "CONNECTING"----connecting status "CONNECTED"----connected status "DISCONNECTED"----disconnected status "NUKNOW"----unknown status

Example:

at+state?

+STATE:INITIALIZED ----initialized status

OK

29. Initialize the SPP profile lib

Command	Response	Parameter
AT+INIT	1. OK----success 2. FAIL----failure	None

30. Inquire Bluetooth device

Command	Response	Parameter
AT+INQ	+INQ: <Param1>,<Param2>,<Param3> OK	Param1: Bluetooth address Param2: device type Param3: RSSI signal intensity

Example 1:

```
at+init\r\n    ---- Initialize the SPP profile lib( can't repeat initialization)
OK
at+iac=9e8b33\r\n    ----Inquire Bluetooth device has an access code
OK
at+class=0\r\n    ----Inquire the Bluetooth device type
at+inqm=1,9,48\r\n    ----Inquire mode: 1) has the RSSI signal intensity indication, 2)stop\
                    inquiring if more than 9 Bluetooth devices response, 3)limited time
                    in inquiring is 48*1.28=61.44s.

At+inq\r\n    ----inquire the Bluetooth device around
+INQ:2:72:D2224,3E0104,FFBC
+INQ:1234:56:0,1F1F,FFC1
+INQ:1234:56:0,1F1F,FFC0
+INQ:1234:56:0,1F1F,FFC1
+INQ:2:72:D2224,3F0104,FFAD
+INQ:1234:56:0,1F1F,FFBE
+INQ:1234:56:0,1F1F,FFC2
+INQ:1234:56:0,1F1F,FFBE
+INQ:2:72:D2224,3F0104,FFBC
OK
```

Example 2:

```
at+iac=9e8b33\r\n    ----inquire the Bluetooth device has an access code
OK
at+class=1f1f\r\n    ----inquire the Bluetooth device whose device type is 0x1f1f
OK
at+inqm=1,9,48\r\n    ----inquire mode: 1) has the RSSI signal intensity indication, 2) stop inquiring
                    if more than 9 Bluetooth devices response, 3) limited time in inquiring is
                    48*1.28=61.44s

At+inq\r\n    ----filter and inquire the Bluetooth device around
+INQ:1234:56:0,1F1F,FFC2
```

```
+INQ:1234:56:0,1F1F,FFC1
+INQ:1234:56:0,1F1F,FFC1
+INQ:1234:56:0,1F1F,FFC1
+INQ:1234:56:0,1F1F,FFC2
+INQ:1234:56:0,1F1F,FFC1
+INQ:1234:56:0,1F1F,FFC1
+INQ:1234:56:0,1F1F,FFC0
+INQ:1234:56:0,1F1F,FFC2
OK
```

Example 3:

```
at+iac=9e8b3f\r\n    ---- inquire the Bluetooth device whose access code is 0x9e8b3f
OK
at+class=1f1f\r\n    ----inquire the Bluetooth device whose device type is 0x1f1f
OK
at+inqm=1,1,20\r\n    ----inquire mode: 1) Has the RSSI signal intensity indication,
                        2) stop inquiring if more than 1 Bluetooth device response,
                        3) limited time in inquiring is 20*1.28=25.6s
At+inq\r\n    ----filter and inquire the Bluetooth device around
+INQ:1234:56:ABCDEF,1F1F,FFC2
OK
```

31. Cancel Bluetooth device

Command	Response	Parameter
AT+INQC	OK	None

32. Set pair

Command	Response	Parameter
AT+PAIR=<Param1>,<Param2>	1. OK----success 2. FAIL----failure	Param1: Bluetooth address of remote device Param2:limited time of connection (second)

Example:

Make pair with the remote Bluetooth device(address:12:34:56:ab:cd:ef), the limited time is 20s.

```
At+pai=1234,56,abcdef,20\r\n
OK
```


33. Connect device

Command	Response	Parameter
AT+LINK=<Param>	1. OK----success 2. FAIL----failure	Param: Bluetooth address of remote device

Example:

Connect with the remote Bluetooth device (address: 12:34:56:ab:cd:ef)

at+fsad=1234,56,abcdef\r\n ----To check whether the Bluetooth device
(address:12:34:56:ab:cd:ef) is in the pair list or not.

OK

at+link=1234,56,abcdef\r\n ----The Bluetooth device (address: 12:34:56:ab:cd:ef)is in the
pair list. The connection can be built directly without
inquiring.

OK

34. Disconnection

Command	Response	Parameter
AT+DISC	1.+DISC:SUCCESS----successful Disconnection OK 2.+DISC:LINK_LOSS----lose the connection OK 3.+DISC:NO_SLC----No SLC connection OK 4 \ +DISC:TIMEOUT----disconnection timeout OK 5 \ +DISC:ERROR----disconnection error OK	None

35. Enter to energy mode

Command	Response	Parameter
AT+ENSNIFF=<Param>	OK	Param: Bluetooth address of device

36. Exit energy mode

Command	Response	Parameter
AT+EXSNIFF=<Param>	OK	Param: Bluetooth address of device

Appendix 1 : Introduction of AT command error code

The form of error ---- ERROR:(error code)

error_code(Hexadecimal)	Note
0	AT command error
1	Default result
2	PSKEY write error
3	Too long length of device name (more than 32 bytes).
4	No device name
5	Bluetooth address: NAP is too long.
6	Bluetooth address: UAP is too long.
7	Bluetooth address: LAP is too long.
8	No PIO number's mask
9	No PIO number
A	No Bluetooth devices.
B	Too length of devices
C	No inquire access code
D	Too long length of inquire access code
E	Invalid inquire access code
F	The length of passkey is 0.
10	Too long length of passkey (more than 16 bytes)
11	Invalid module role
12	Invalid baud rate
13	Invalid stop bit
14	Invalid parity bit
15	Authentication device is not at the pair list.
16	SPP lib hasn't been initialized.
17	SPP lib has been repeated initialization.
18	Invalid inquire mode
19	Too long inquire time
1A	No Bluetooth address
1B	Invalid safe mode
1C	Invalid encryption mode

Appendix 2: The introduction of devices

The Class of Device/Service(CoD) is a 32 bits number that of 3 field specifies the service supported by the device. Another field specifies the minor device class, which describes the device type in more detail

The Class of Device /Service (CoD) field has a variable format. The format is indicated using the 'within the CoD .The length of the Format Type field is variable and ends with two bits different from '11'.The version field starts at the least significant bit of the CoD and may extend upwards. In the 'format#1' of the CoD (format Type field=00), 11 bits are assigned as a bit –mask (multiple bits can be set) each bit corresponding to a high level generic category of service class. Currently 7 categories are defined. These are primarily of a ' public service' nature. The remaining 11 bits are used for indicating device type category and other device-specific characteristics. Any reserved but otherwise unassigned bits, such as in the Major Service Class field, should be to 0.

Figure 1.2: The Class of Device/Service field (format type). Please note the krder in which the octets are sent on the air and stored in memory. Bit number 0 is sent first on the air .

1. MAJOR SERVICE CLASSES

Bit no Major Service Class

13 Limited Discoverable Mode [Ref #1]

14 (reserved)

15 (reserved)

16 Positioning(Location identification)

17 Networking (LAN, Ad hoc, ...)

18 Rendering (Printing ,Speaker,...)

19 Capturing (Scanner, Microphone,...)

20 Object Transfer (v-Inbox, v-Folder,...)

21 Audio (Speaker, Microphone, Headset service,...)

22 Telephony (Cordless telephony, Modem, Headset service,...)

23 Information (WEB-server, WAP- server,...)

TABLE 1.2:MAJOR SERVICE CLASSES

[Ref #1 As defined in See Generic Access Profile, Bluetooth SIG]

2. MAJOR DEVICE CLASSES

The Major Class segment is the highest level of granularity for defining a Bluetooth Device. The main function of a device is used for determining the major Class grouping. There are 32 different possible major classes. The assignment of this Major Class field is defined in Table1.3.

1 2 1 1 1 0 9 8 Major Device Class
 0 0 0 0 0 Miscel laneous [Ref #2]
 0 0 0 0 1 Computer (desktop, notebook, PDA, organizers,...)
 0 0 0 1 0 Phone (cellular ,cordless ,payphone, modem,...)
 0 0 0 1 1 LAN/Network Access point
 0 0 1 0 0 Audio/Video (headset, speaker, stereo, video display, vcr ...)
 0 0 1 0 1 Periphereal (mouse, joystick, keyboards....)
 0 0 1 1 0 Imaging (printing, scanner, camera, display,...)
 1 1 1 1 1 Uncategorized, specific device code not specified

XXXX

All other values reserved

TABLE 1.3: MAJORE DEVICE CLASSES

[Ref #2:Used where a more specific Major Device Class is not suited (but only as specified as in this document) .Devices that do not have a major class assigned can use the all-1 code until' classified']

3. THE MINOR DEVICE CLASS FIELD

The' Minor Device Class field' (bits 7 to 2 in the CoD), are to be interpreted only in the context of the Major Device Class (but interpreted of the Service Class field).Thus the meaning of the bits may change, depending on the value of the ' Major Device Class field'. When the Minor Device Class field indicates a device class ,then the primary decvice class should be reported, e. g . a cellular phone that can work as a cordless handset should

4. MINOR DEVICE CLASS FIELD–COMPUTER MAJOR CLASS

Minor Device Class

7 6 5 4 3 2 bit no of CoD

0 0 0 0 0 0 Uncategorized, code for device not assigned

0 0 0 0 0 1 Desktop workstation

0 0 0 0 1 0 Server-class computer

0 0 0 0 1 1 Laptop

0 0 0 1 0 0 Handheld PC/PDA(clam shell)

0 0 0 1 0 1 Palm sized PC/PDA

0 0 0 1 1 0 Wearable computer (Watch sized)

XX XX XX All other values reserved

TABLE 1.4: SUB DEVICE CLASS FIELD FOR THE' COMPUTER 'MAJOR CLASS

5. MINOR DEVICE CLASS FIELD – PHONE MAJOR CLASS

Minor Device Class

7 6 5 4 3 2 bit no of CoD

0 0 0 0 0 0 Uncategorized, code for device not assigned

0 0 0 0 0 1 Cellular

0 0 0 0 1 0 Cordless

0 0 0 0 1 1 Smart phone

0 0 0 1 0 0 Wired modem or voice gateway

0 0 0 1 0 1 Common ISDN Access

0 0 0 1 1 0 Sim Card Reader

X X X X X X All other values reserved

TABLE1.5: SUB DEVICE CLASSES FOR THE'PHONE' MAJOR CLASS

6. MINOR DEVICE CLASS FIELD –LAN/NETWORK ACCESS POINE MAJOR CLASS

Minor Device Class

7 6 5 bit no of CoD

0 0 0 Fully available

0 0 1 1 – 17% utilized

0 1 0 1 7 - 33% utilized

0 1 1 3 3 – 50% utilized

1 0 0 5 0 – 67% utilized

1 0 1 6 7 – 83% utilized

1 1 0 8 3 – 99% utilized

1 1 1 No service available [REF #3]

XXX All other values reserved

TABLE1.6: THE LAN/NETWORK ACCESS POINE LOAD FACTOR FIELD

[Ref#3:“Device is fully utilized and cannot accept additional connections at this time,please retry later”]

The exact loading formula is not standardized. It is up to each LAN/Network Access Point implementation to determine what internal conditions to report as a utilization of communication requirement is that the box .As a recommendation, a client that locates multiple LAN/Network Access Points should attempt to connect to the one reporting the lowest load.

Minor Device Class

4 3 2 bit no of CoD

0 0 0 Uncategorized (use this value if no other apply)

XXX All other values reserved

TABLE1.7:RESERVED SUB-FIELD FOR THE LAN/NETWORK ACCESS POINE

7. MINOR DEVICE CLASS FIELD – AUDIO/VIDEO MAJOR CLASS

Minor Device Class

7 6 5 4 3 2 bit no of CoD

0 0 0 0 0 0 Uncategorized, code not assigned

0 0 0 0 0 1 Device conforms to the Headset profile

0 0 0 0 1 0 Hands-free

0 0 0 0 1 1 (Reserved)

0 0 0 1 0 0 Microphone

0 0 0 1 0 1 Loudspeaker

0 0 0 1 1 0 Headphones

0 0 0 1 1 1 Portable Audio

0 0 1 0 0 0 Car audio

0 0 1 0 0 1 Set-top box

0 0 1 0 1 0 HiFi Audio Device

0 0 1 0 1 1 VCR

0 0 1 1 0 1 Camcorder

0 0 1 1 1 0 Video Monitor

0 0 1 1 1 1 Video Display and Loudspeaker

0 1 0 0 0 0 Video Conferencing

0 1 0 0 0 1 (Reserved)

0 1 0 0 1 0 Gaming/Toy [Ref #4]

X X X X X X All other values reserved

[Ret #4: Only to be used with a Gaming/Toy device that makes audio/video capabilities available via Bluetooth]

TABLE 1.8: SUB DEVICES FOR THE 'AUDIO/VIOEO' MAJOR CLASS

8. MINOR DEVICE CLASS FIELD – PERIPHERAL MAJOR CLASS

Minor Device Class

7 6 bit no of CoD

0 1 Keyboard

1 0 Pointing device

1 1 Combo keyboard /pointing device

X X X All other values reserved

TABLE 1.9: THE PERIPHERAL MAJOR CLASS KEYBOARD/POINTING DEVICE FIELD

Bits 6 and 7 independently specify mouse, keyboard or combo mouse/keyboard devices.

These may be combined with the lower bits in a multifunctional device.

Minor Device Class

5 4 3 2 bit no of CoD

0 0 0 0 Uncategorized device

0 0 0 1 Gamepd

0 0 1 1 Remote control

0 1 0 0 Sensing device

0 1 0 1 Digitizer tablet

X X X X All other values reserved

TABLE1.10: RESERVED SUB-FIELD FOR THE DEVICE TYPE

9. MINOR DEVICE CLASS FIELD – IMAGING MAJOR CLASS

Minor Device Class

7 6 5 4 bit no of CoD

X X X 1 Display

X X 1 X Camera

X 1 X X Scanner

1 X X X Printer

X X X X All other values reserved

TABLE 1.11: THE TMAGING MAJOR CLASS BITS 7 TO 7

Bits 4 to 7 independently specify bi splay, camera, scanner or printer. These may be combined in a multifunctional device.

Minor Device Class

3 2 bit no of CoD

0 0 Uncategorized, default

X X All other values reserved

TABLE 1. 12: THE IMAGING MAJOR CLASS BITS 2 AND 3

Bits 2 and 3 are reserved

Appendix 3: (The Inquiry Access Codes)

The General-and Device-Specific Inquiry Access Codes (DIACs)

The Inquiry Access Code is the first level of filtering when finding Bluetooth devices.

The main purpose of defining multiple IACs is to limit the number of responses that are received when scanning devices within range.

0. 0x9E8B33 ---- General/Unlimited Inquiry Access Code(GIAC)

1. 0x9E8B00 ---- Limited Dedicated Inquiry Access Code(LIAC)

2. 0x9E8B01 ~ 0x9E8B32 RESERVED FOR FUTURE USE

3. 0x9E8B34 ~ 0x9E8B3F RESERVED FOR FUTURE USE

The Limited Inquiry Access Code(LIAC)is only intended to be used for limited time periods in scenarios where both sides have been explicitly caused to enter this state, usually by user action. For further explanation of the use of the LIAC, please refer to the Generic Access Profile.

In contrast it is allowed to be continuously scanning for the General Inquiry Access Code (GIAC)and respond whenever inquired.

REYAX TECHNOLOGY CO.,LTD.

Address : 7F., No.24, Ln. 123, Sec. 6, Minquan E. Rd., Neihu Dist., Taipei City, Taiwan

Web : <http://www.reyax.com>

Tel : +886-2-8791-3666 ; +886-2-2627-2777

Fax : +886-2-8791-3381 ; +886-2-2627-2781

E-mail : sales@reyax.com